

Work Order ID 53172

October 26, 2009 9:02:48 AM



Page 1

Item ID: D205-634-041

Accept



Setup Start



Revision ID: D

Stop



Item Name: Replacement Skidtube

Start Date: 26/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 10/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Approvals:

Process Plan: PS

Date: 09-10-26

Tooling:

Date:

Run Start



QC:

Date:

SPC (Y/N):

Date:

Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

Draw Nbr

Revision Nbr

D2580

Rev D

100

0.00



DOCUMENT CONTROL

DC

Memo

0.00

Document Control

Photocopy D205-634 bluefile & type labels per PPP D205-634-041 CHG002

N/A

110

0.00



BENDING MACHINE - SKIDTUBES

CNC Bend 1

Memo

0.00

CNC Delta 100 Bender

1-Bend as per program D2580.C on CNC Bender and Folio FT009

2-Cut tubes as per Dwg. D2580

9-10-28

Work Order ID 53172

October 26, 2009 9:02:48 AM



Page 2

Item ID: D205-634-041

Accept



Setup Start



Revision ID: D

Stop



Item Name: Replacement Skidtube

Start Date: 26/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 10/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

120

0.00



Skidtubes

Memo

0.00

Skidtubes

1- Deburr ends

2- C'sink holes as per dwg without cutting fluid

3- Prepare tube for welding, remove alodine as required.

4- Scribe batch number insied aft end of tube.

DP 9-10-28

130

0.00



QC

QC5- Inspect part completeness to step on W/O

Memo

0.00

2) 8/24/09

Quality Control

②

φ

Work Order ID 53172

October 26, 2009 9:02:48 AM



Page 3

Item ID: D205-634-041

Accept



Setup Start



Revision ID: D

Stop



Item Name: Replacement Skidtube

Start Date: 26/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 10/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

140

0.00



Skidtubes

Memo

0.00

Skidtubes

1-Weld step D2576 as per Dwg. D2580 and QSI 004.

A/R□□□ Aluminum Rod

M111779

BE 09/10/29

2-Prep per QSI 005 and weld crossbolt spacers D2579 as per Dwg. D2580, QSI 004.

For D2579 spacers, weld one side, pass 3/8" drill, weld other side, pass 3/8" drill

A/R□□□ Aluminum Rod

M111779

BE 09/10/29

3-Grind welds as per Dwg D2580 Grind flush ridge made from bending

4-Drill holes for wearplates using DT 8217 & DT8937 Open holes to 19/64", adjust stopper not to hit web. Deburr

5-Counterbore crossbolt spacers to 7/16" ID x 1.0" deep as per Dwg D2580. Deburr holes

6-Drill pilot holes for aft cap using DT 8215 Open holes to 0.208". Deburr

7-Drill pilot holes for Towing using DT8091, open to .640" and Deburr

BE 09/11/02

Work Order ID 53172

October 26, 2009 9:02:48 AM



Page 4

Item ID: D205-634-041

Accept



Setup Start



Revision ID: D

Stop



Item Name: Replacement Skidtube



Start Date: 26/10/2009 Start Qty: 1.00

Cust Item ID:

Required Date: 10/11/2009 Req'd Qty: 1.00

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150 QC Quality Control	QC10- Inspect visual per QSI004- ground welds Memo	0.00 0.00	⇒ 8 or 10/02			(X) 10	1		
160 QC Quality Control	QC5- Inspect part completeness to step on W/O Memo	0.00 0.00	⇒ 8 or 10/02			(X) 10	1		
170 HandFinish Hand Finishing	Pressure Wash per QSI005 4.3 Memo	0.00 0.00	⇒ 10 or 11/04			(X) 10	1		

Work Order ID 53172

October 26, 2009 9:02:48 AM



Page 5

Item ID: D205-634-041

Accept



Setup Start



Revision ID: D

Stop



Item Name: Replacement Skidtube

Start Date: 26/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 10/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Run Start



Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Stop



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Draw
Number

Draw
Rev.

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

180

White Gloss(Ref:4.3.5.1) per QSI005 4.3-Alum

0.00



Powdercoat

Memo

START TIME: 1:00pm

OVEN TEMPERATURE: 320°F

FINISH TIME: 1:30pm

0.00

09/11/04

(X) 0

Powder Coating

190

QC3- Inspect Part Finish

0.00



QC

Memo

0.00

10/09/11/05

XI

Quality Control

Work Order ID 53172

October 26, 2009 9:02:48 AM



Page 6

Item ID: D205-634-041

Accept



Setup Start



Revision ID: D

Stop



Item Name: Replacement Skidtube

Start Date: 10/25/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 10/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Run Start



Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Stop



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Draw
Number

Draw
Rev.

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

200

0.00



HandFinish

Hand Finishing

Memo

0.00

1-Install inserts & wearplates & Gaskets as per Dwg. D2580. Use a drop of Sikaflex on insert holes before installing wearplates

A/R ☐ ☐ ☐ Sikaflex-291 ☐ M112391

Sikaflex expire date: 10/20

2-Coat D2594-3 O' rings with Petroleum Jelly and install on D2594-1 plugs as per Dwg D2580

3-Inspect for foreign object per QSI 024

4-Install 2855 Aft Cap as per Dwg D2580 and seal Fwd Step & Aft Cap with Sikaflex. Clean excess adhesive

A/R ☐ ☐ ☐ Sikaflex-291 ☐ M112391

Sikaflex expire date: 10/20

5-Wing Walk as per Dwg D2580 and QSI 005 4.4

Batch: M112106

M-h 09/11/09

mp 09/11/09

(Rx)

Work Order ID 53172

October 26, 2009 9:02:48 AM



Page 7

Item ID: D205-634-041

Accept



Setup Start



Revision ID: D

Stop



Item Name: Remplacement Skidtube

Start Date: 26/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 10/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Run Start



Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Stop



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

210 QC5- Inspect part completeness to step on W/O

0.00



QC

Memo

0.00

Quality Control

Inspect Aft Cap, Fwd Step and Wing Walk of work to Current Step Inspect for Foreign objects per QSI 024

ml 02 11 02 (1)

220

0.00



Packaging

Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPPD205-634-041

Location: _____

PPP Rev: _____

PPP 51496

7/11/10 10 SP

230

0.00



QC

QC21- Final Inspection - Work Order Release

Memo

0.00

Quality Control

09/11/10 MF 09-11-10

Picklist Print

October 26, 2009 9:02:52 AM

Page 1

11

Work Order ID: 53172

Parent Item: D205-634-041RevD

Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D2580-1RevD		Manufactured	No			110	Each	0.0000	1.0000			
205 Skidtube bent detail												
D2576-3RevG		Manufactured	No			140	Each	169.0000	1.0000			
Step (maching detail)												

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	169	
43504	21	
46661	101	
52215	47	

D2579RevE		Manufactured	No			140	Each	695.0000	20.0000			
Crossbolt Spacer												

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
LG	573	
51525	573	
Main Warehouse		
ST	122	
43988	4	
46434	4	
46956	2	
47797	9	
48272	2	
51314	71	
51315	30	

1 BE 09/10/29

20 BE 09/10/29

Picklist Print

Page 2

October 26, 2009 9:02:52 AM

Work Order ID: 53172

Parent Item: D205-634-041RevD

Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D2855RevA		Manufactured	No			200	Each	106.0000	1.0000			

Cap

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP6	106	
50513	1	
50770	5	
51539	100	

X1 mo 09/11/05

AN3-5A

Purchased

No

200

Each

2,249.000 2.0000

Bolt

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	2249	
100188	188	
105057	2061	

X2 mo 09/11/05

Picklist Print

October 26, 2009 9:02:52 AM

Work Order ID: 53172

Parent Item: D205-634-041RevD

Parent Item Name: Replacement Skidtube


Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
AN960JD10L  Washer		Purchased	No			200	Each	5,949.000	2.0000			

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	5949	
101291	16	
104885	153	
105793	236	
109632	544	
110985	5000	

X2 m009/11/05

ALS7-1032-130

Purchased

No

200

Each

2,234.000 50.0000



Insert

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	2234	
105855	16	
108606	52	
111529	1488	
111779	313	
112772	365	

110511

X50 m0 09/11/05

Picklist Print

October 26, 2009 9:02:52 AM

Work Order ID: 53172



Parent Item: D205-634-041RevD



Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin. Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
AN3C4A 		Purchased	No			200	Each	1,474.000	50.0000			
BOLT												

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	1474	
112314	13	
112720	12	
112724	3	
112794	846	
112829	500	
112991	100	

XSO MD 09/11/05

AN960C10L



washer

Purchased

No

200

Each

4,868.000 50.0000



<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
OFFSHORE		
FG	100	
103585	100	
Main Warehouse		
ST	4768	
112116	876	
112612	2892	
112933	1000	

XSO MD 09/11/05

Picklist Print

Page 5

October 26, 2009 9:02:53 AM

Work Order ID: 53172



Parent Item: D205-634-041RevD



Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3566-13RevC		Manufactured	No			200	Each	33.0000	1.0000			

Gasket

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	31	
(51606)	31	
Main Warehouse		
ST	2	
45717	1	
50265	1	

XL MD0911105

Picklist Print

Page 6

October 26, 2009 9:02:53 AM

Work Order ID: 53172



Parent Item: D205-634-041RevD



Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3566-5RevC		Manufactured	No			200	Each	37.0000	1.0000			

Gasket

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	12	
51929	12	
Main Warehouse		
FP19	21	
51669	1	
52909	20	
Main Warehouse		
ST	4	
36113	1	
46186	1	
47318	1	
51260	1	

~~21~~ MD 09/11/05

October 26, 2009 9:02:53 AM

Shop Packet Print

Page 6

Picklist Print

Page 7

October 26, 2009 9:02:53 AM

Work Order ID: 53172



Parent Item: D205-634-041RevD



Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3566-1RevC		Manufactured	No			200	Each	26.0000	2.0000			

Gasket

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	21	
52512	21	
Main Warehouse		
ST	5	
46349	1	
51218	1	
51259	3	

X2 MD 09/11/05

Picklist Print

Page 8

October 26, 2009 9:02:53 AM

Work Order ID: 53172



Parent Item: D205-634-041RevD



Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3564-11RevD		Manufactured	No			200	Each	46.0000	1.0000			

Wearshoe

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	11	
51905	11	
Main Warehouse		
FP19	33	
51594	10	
52125	23	
Main Warehouse		
ST	2	
45823	1	
50112	1	

21 mpo 9/11/05

Picklist Print

October 26, 2009 9:02:53 AM

Work Order ID: 53172

Parent Item: D205-634-041RevD

Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3564-13RevD		Manufactured	No			200	Each	56.0000	1.0000			

Wearshoe

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP17	44	
51611	33	
52059	11	
Main Warehouse		
ST	12	
45409	2	
46495	10	

XI MD 09/11/05

D3564-9RevD

Manufactured No

200

Each

10.0000

1.0000



Wearshoe

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP19	8	
51675	8	
Main Warehouse		
ST	2	
44659	1	
45825	1	

XI MD 09/11/05

Picklist Print

October 26, 2009 9:02:53 AM

Work Order ID: 53172

Parent Item: D205-634-041RevD

Parent Item Name: Replacement Skidtube



Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty GR Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3564-5RevD		Manufactured	No			200	Each	37.0000	1.0000			
												
Wearshoe												

Warehouse	Loc Qty	Loc Code
<u>Location</u>		
OFFSHORE		
FG	2	
34806	2	
Main Warehouse		
FP19	18	
51655	10	
51925	8	
Main Warehouse		
ST	17	
45824	1	
47433	1	
52595	15	

XI MD 09/11/08

D2594-3RevC

Manufactured No

200

Each

1,050.000 16.0000



O-Ring, 205 Skidtube

Warehouse	Loc Qty	Loc Code
<u>Location</u>		
Main Warehouse		
FP	50	
51613	50	
Main Warehouse		
ST	1000	
52562	1000	

XI MD 09/11/08

Picklist Print

Page 11

October 26, 2009 9:02:53 AM

Work Order ID: 53172



Parent Item: D205-634-041RevD



Parent Item Name: Replacement Skidtube

Start Date: 26/10/2009

Required Date: 10/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D2594-1RevC		Manufactured	No			200	Each	601.0000	16.0000			

Plug, 205 Skidtube

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	601	
42221	16	
42807	92	
43884	3	
46435	2	
51527	9	
51757	479	

X 16 MD 09/11/05

DART**RELEASED**
07.06.28 #

DESIGN #	DRAWN BY RH	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED #	APPROVED #	DRAWING NO. D2580	REV. D SHEET 1 OF 3
DATE 07.02.27		TITLE 205 SKIDTUBE ASSEMBLY	SCALE NTS
A	96.09.16	NEW ISSUE	
B	96.12.02	AS MANUFACTURED	
C	98.08.26	REDRAWN, INCLUDED DEO 9094/9097	
D	07.02.27	CHANGE TO SS WEARPLATES AND GASKETS, INCLUDE DEO 9124/9183	

QTY -041	QTY -045	Part Number	Description
X		D2580-041	SKIDTUBE ASSEMBLY
	X	D2580-045	SKIDTUBE ASSEMBLY
1	1	D2500-1-190	EXTRUSION
1	1	D2576-3	STEP
20	24	D2579	CROSS BOLT SPACER
16	16	D2594-1	PLUG
16	16	D2594-3	O-RING
1	1	D2596	205 WEB
1	1	D2855	AFT CAP
1	1	D3564-5	WEARSHOE
1	1	D3564-9	WEARSHOE
1	1	D3564-11	WEARSHOE
1	1	D3564-13	WEARSHOE
2	2	D3566-1	GASKET
1	1	D3566-5	GASKET
1	1	D3566-13	GASKET
50	50	ALS7-1032-130 or AKS7-1032-130 or AKS4-1032-130 or AELS-1032-130	INSERT
50	50	AN3C4A	BOLT
2	2	AN3-5A	BOLT
50	50	AN960C10L	WASHER
2	2	AN960JD10L	WASHER

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER NO. 53122

09-10-26


GENERAL NOTES:

- 1) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- 2) ALL DIMENSIONS ARE IN INCHES
- 3) INSERT D2596 WEB TO LOCATION SHOWN OFF AFT END OF SKIDTUBE AND BOND WEB INTO OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241 ADHESIVE PER DART QSI 015 BEFORE BENDING. ENSURE HOLES LINE-UP.
- 4) BEND AS A SMOOTH RADIUS STARTING WITH A MAXIMUM CENTERLINE RADIUS OF 60 AND ENDING WITH A MINIMUM RADIUS OF 30. A MAXIMUM REDUCTION OF 0.200 IN DIAMETER IS ALLOWABLE IN THE BENT PORTION OF THE TUBE.
- 5) USE DART DRILL TEMPLATE TD2577-205 TO LOCATE AND DRILL Ø0.297 HOLES FOR WEARSHOE INSERTS. INSTALL ALS7-1032-130 PER SECTION D-D (50 PLACES) AFTER FINISH. INSTALL AN3C4A BOLTS AND AN960C10L WASHERS WITH SIKAFLEX-241/-291.
- 6) WELDING TO BE DONE PER DART QSI 004.
- 7) FINISH:
SEE NOTES ON
PAGE 2 FOR D2580-041 AND
PAGE 3 FOR D2580-045
- 8) INSERT D2594-1 PLUG C/W D2594-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE) AFTER FINISH (16 PLACES).


Copyright © 1996 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.


SCALE 5:24

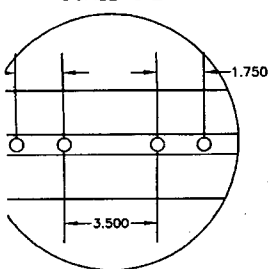


DETAIL B
SCALE 5:24

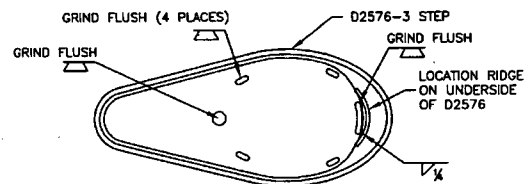


D2580-1 DRILLING DETAIL

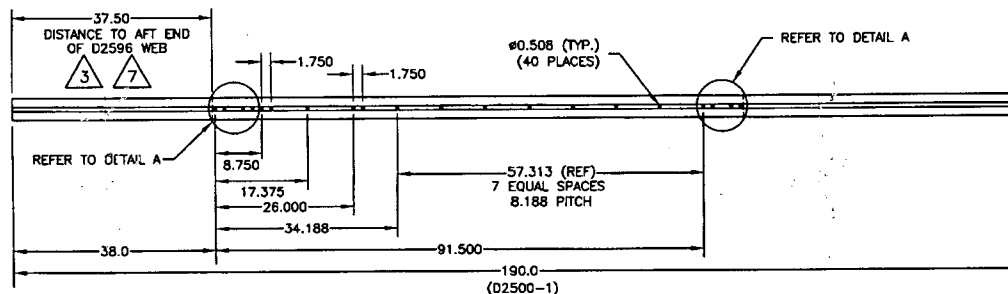


D2580-1 BENDING AND CUTTING DETAIL

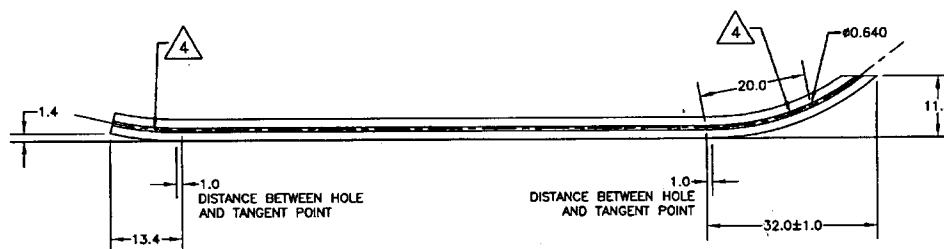


DETAIL C
SCALE 5:24

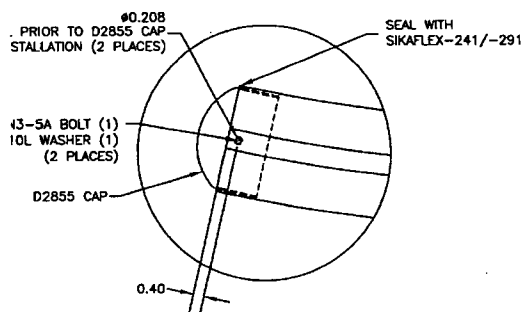

SECTION D-D
SCALE 5:24

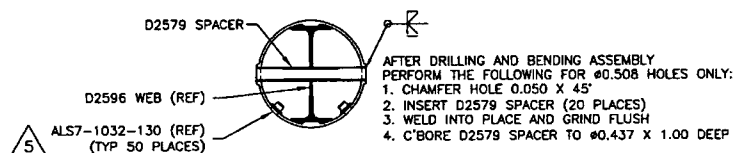

D2580-041 ASSEMBLY DETAIL

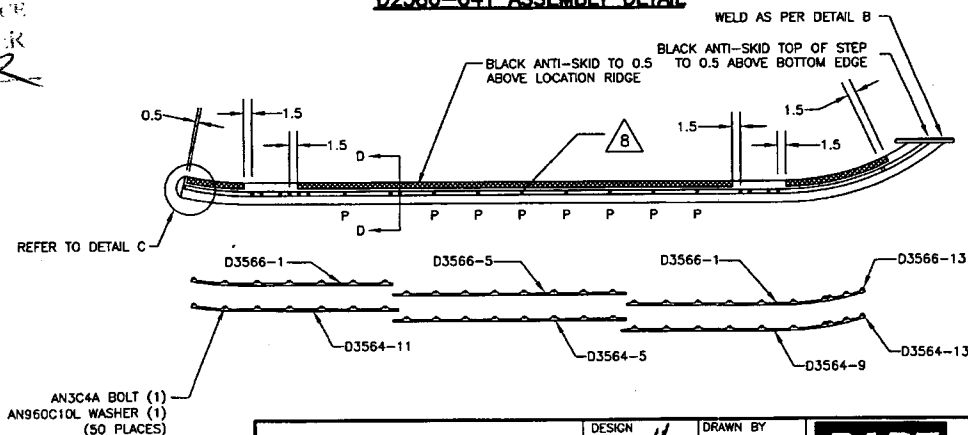





-041 NOTES

INISH: ACID ETCH, ALODINE PER DART QSI 005 4.1 PRIOR TO INSERTING D2596 WEB
POWDER COAT ASSEMBLY GLOSS WHITE (REF. 4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT AS INDICATED PER DART QSI 005 4.4

COPYRIGHT © 1998 BY DART AEROSPACE LTD.

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL
AND IS SUPPLIED ON THE EXPRESS CONDITION
THAT IT IS NOT TO BE USED FOR ANY PURPOSE
OR COPIED OR COMMUNICATED TO ANY OTHER
PERSON WITHOUT WRITTEN PERMISSION FROM
DART AEROSPACE LTD.

DESIGN		DRAWN BY	
CHECKED		APPROVED	
DATE			
07 02 27			


DART DART AEROSPACE LTD.
HAMPSHIRE, ONTARIO, CANADA

DRAWING NO.	D2580
TITLE	205 SKIDTUBE ASSEMBLY

REV. D
SHEET 2 OF 3

1:24

SCALE 5:24

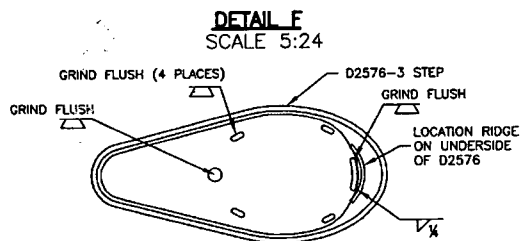


RELEASED
07-06-28

SCALE 5:24




SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 53172




INISH: ACID ETCH, ALODINE PER DART QSI 005 4.1 PRIOR TO INSERTING D2596 WEB
POWDER COAT ENTIRE ASSEMBLY GREEN (REF. 4.3.5.8) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT AS INDICATED PER DART QSI 005 4.4


D2580-1 DRILLING DETAIL

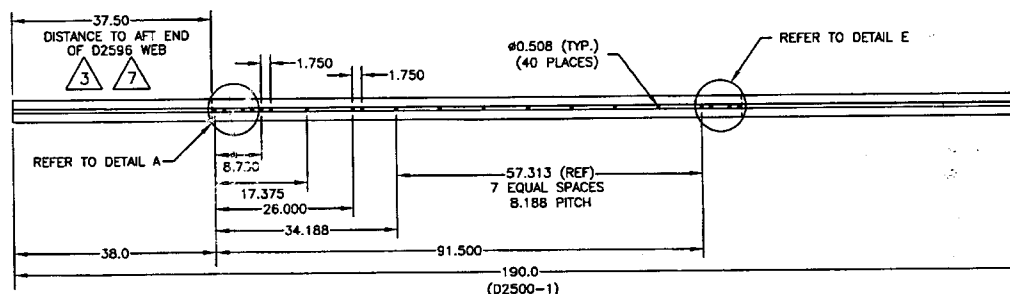


(MAKE FROM D2580-1 DRILLING DETAIL)

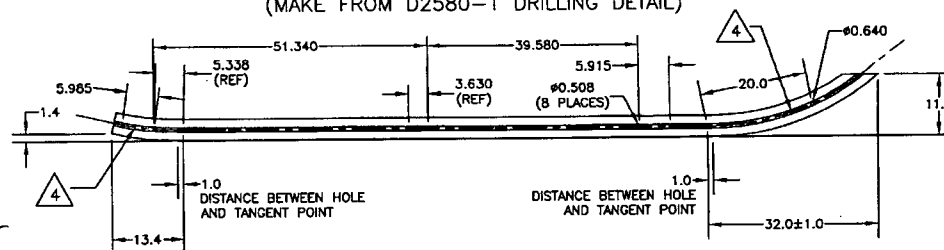

D2580-045 ASSEMBLY DETAIL

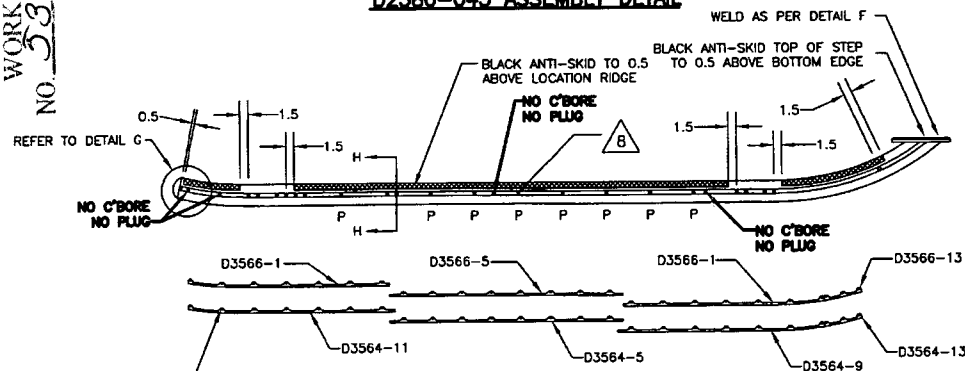

COPYRIGHT © 1996 BY DART AEROSPACE LTD. THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	DESIGN	DRAWN BY	 DART AEROSPACE LTD. MARKHAM, ONTARIO, CANADA		
	CHECKED	APPROVED		DRAWING NO.	REV. 0
	DATE	TITLE		SHEET	3 OF 3
	07.02.27	205 SKIDTUBE ASSEMBLY		1:24	